

**INSTALLATION INSTRUCTIONS FOR INSTALLING A DAMPER SUPPORT BOX KIT. FOR USE WITH VILLA VISTA™, WRT4826WH AND BIS® PANORAMA WOOD-BURNING FIREPLACES**

**KIT CONTENTS**

- 1 ea. Damper Support Box
- 1 ea. Instruction Sheet

DAMPER SUPPORT BOX KIT	
Cat. No.	Description
PR-SR2932	Damper Support Box Kit

*Table 1*

**GENERAL INFORMATION**

If you encounter any problems, need clarification of these instructions or are not qualified to properly install this kit, contact your local distributor or dealer.

Read this instruction sheet in its entirety before beginning the installation.

**ALL WARNINGS AND PRECAUTIONS IN THE INSTALLATION AND OPERATION MANUAL PROVIDED WITH THE APPLIANCE APPLY TO THESE INSTRUCTIONS.**


**SHUT DOWN THE APPLIANCE AND ALLOW IT TO COMPLETELY COOL BEFORE PROCEEDING.**

**INSTALLATION**

- Step 1.** Remove the catalytic combustor (*see Figure 1*).
- a. Rotate the retainers to release the combustor support plate while holding it to make sure it does not drop.
  - b. Rotate the support plate and remove the combustor.
  - c. (optional) cleaning the combustor Remove fly ashes on the combustor using a soft brush.


**DO NOT:**

- Drop the combustor
- Try to clean with any sharp tool
- Run water or compressed air through the combustor

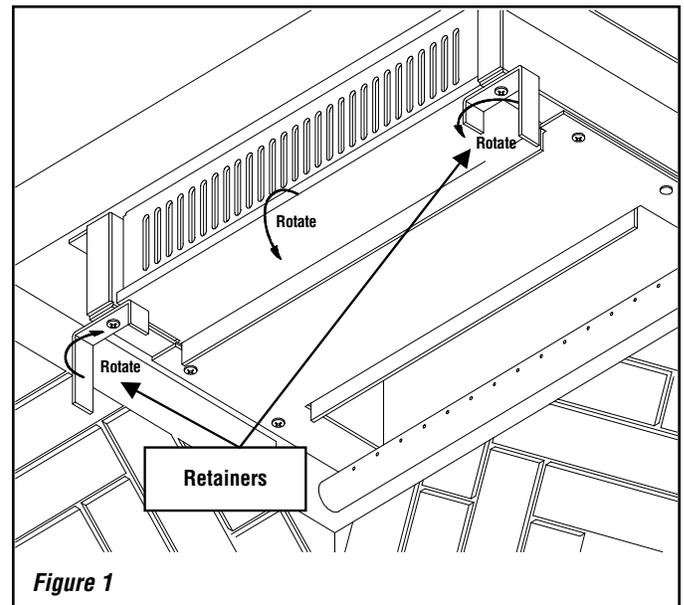


**Step 2.** Remove the refractory bricks and log retainer (see **Figure 2**).

- a. Remove the front refractory brick
- b. Remove the log retainers
- c. Remove the bottom refractory brick
- d. Remove the left side refractory brick
- e. Remove the right side refractory brick
- f. Remove the back refractory brick

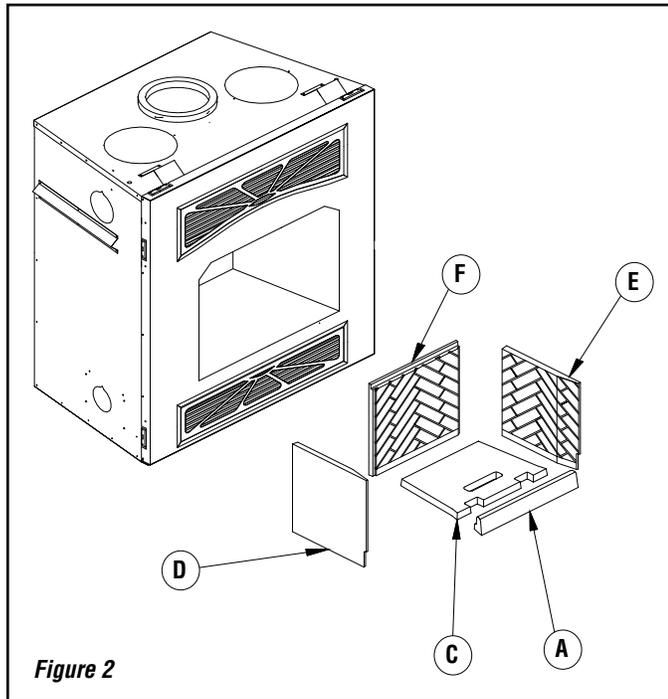

**Step 3.** Remove the catalytic and by-pass damper support box (see **Figure 3**).

- Remove the 6 screws holding the box in place (3 on each side). Hold the box to make sure it does not drop.

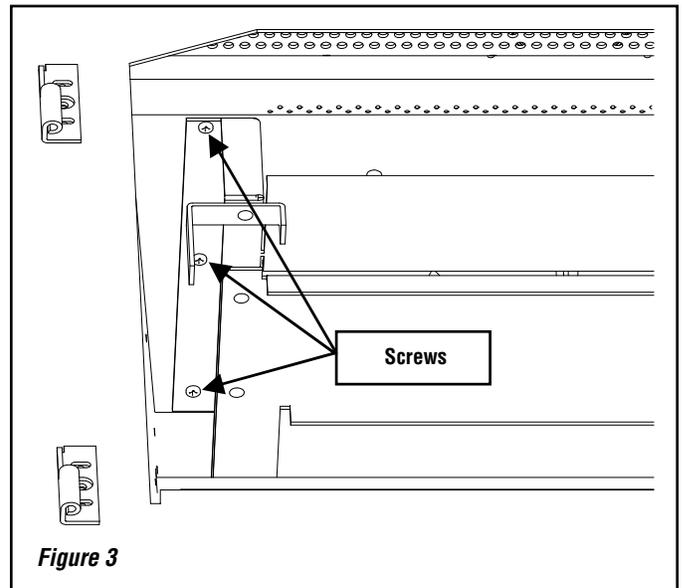

**Step 4.** Install the replacement box following these steps in reverse.

NOTE: DIAGRAMS & ILLUSTRATIONS ARE NOT TO SCALE.

IHP reserves the right to make changes at any time, without notice, in design, materials, specifications, prices and also to discontinue colors, styles and products. Consult your local distributor for fireplace code information.

**INSTRUCTIONS D'INSTALLATION D'UN KIT DE SUPPORT DE REGISTRE. POUR  
UTILISATION AVEC LES FOYERS À BOIS VILLA VISTA<sup>MC</sup>, WRT4826WH ET BIS<sup>MD</sup> PANORAMA**

**INCLUS DANS LE KIT**

- 1 - Support de registre
- 1 - Feuille d'instruction

SUPPORT DE REGISTRE	
N° cat.	Description
PR-SR2932	Support de registre
<i>Tableau 1</i>	

**INFORMATIONS GÉNÉRALES**

Si vous avez un problème quelconque, avez besoin de clarification pour ces instructions ou n'êtes pas qualifié pour installer correctement ce kit, contactez votre distributeur ou détaillant local.

Lisez toute les instructions sur cette feuille avant de commencer l'installation.

**LES MISES EN GARDE ET AVERTISSEMENTS DONNÉS DANS LE MANUEL D'INSTALLATION ET D'UTILISATION S'APPLIQUENT AUSSI POUR LE PRÉSENT FEUILLET D'INSTALLATION.**

**ÉTEINDRE LE FOYER ET LE LAISSER REFROIDIR COMPLÈTEMENT AVANT DE FAIRE LES RÉGLAGES.**


**INSTRUCTIONS D'INSTALLATION**

**Étape 1.** Retirer le catalyseur (voir **Figure 1**).

- a. Tourner les dispositifs de retenue pour libérer la plaque du support du catalyseur tout en le maintenant pour qu'il ne tombe pas.
- b. Tourner la plaque du support et retirer le catalyseur.
- c. (optionnel) nettoyer le catalyseur. Enlever les cendres à l'aide d'une brosse douce.


**NE PAS :**

- Laisser tomber le catalyseur
- Tenter de nettoyer le catalyseur avec un objet pointu
- Utiliser un jet d'eau ou d'air comprimé dans le catalyseur

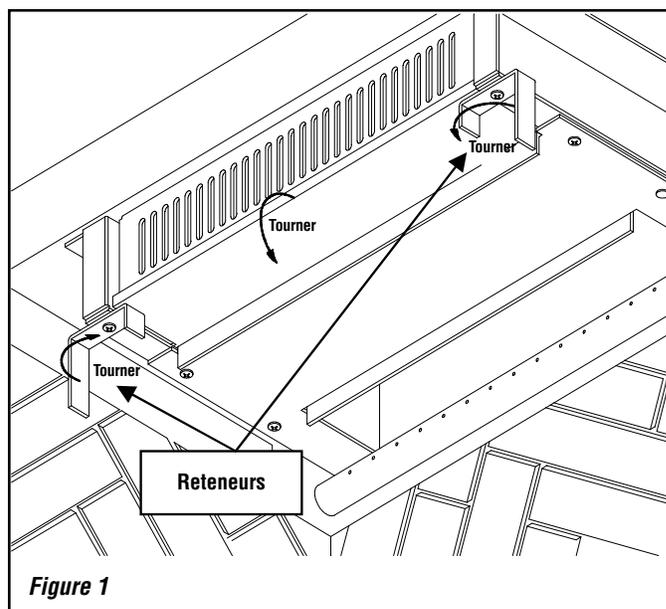


**Étape 2.** Retirer les briques réfractaires et les supports de bûche (voir **Figure 2**).

- a. Enlever la pierre avant
- b. Enlever les supports de bûche
- c. Enlever la pierre du fond
- d. Enlever la pierre du côté gauche
- e. Enlever la pierre du côté droit
- f. Enlever la pierre arrière

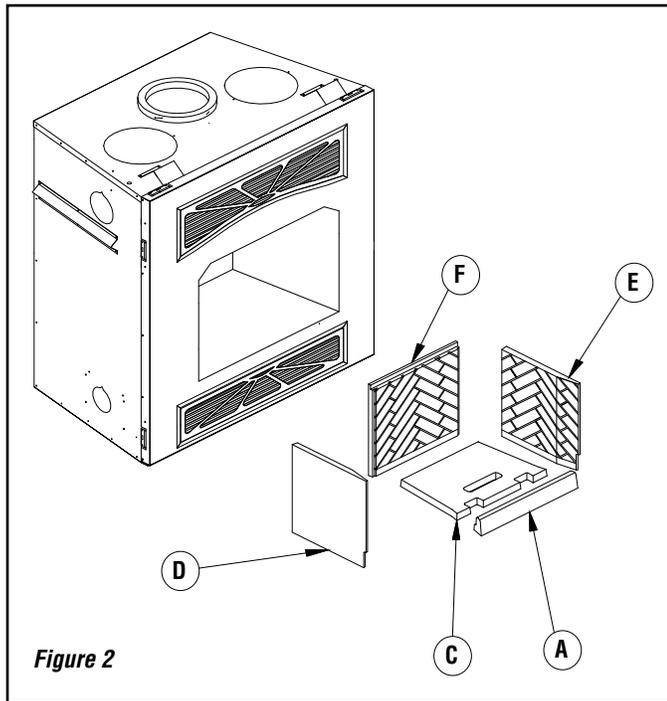

**Étape 3.** Retirer la boîte support de catalyseur et de dérivée (voir **Figure 3**).

- Enlever les six (6) vis de la boîte support de catalyseur et de dérivée (trois (3) vis de chaque côté) (maintenir la boîte pour ne pas qu'elle tombe)

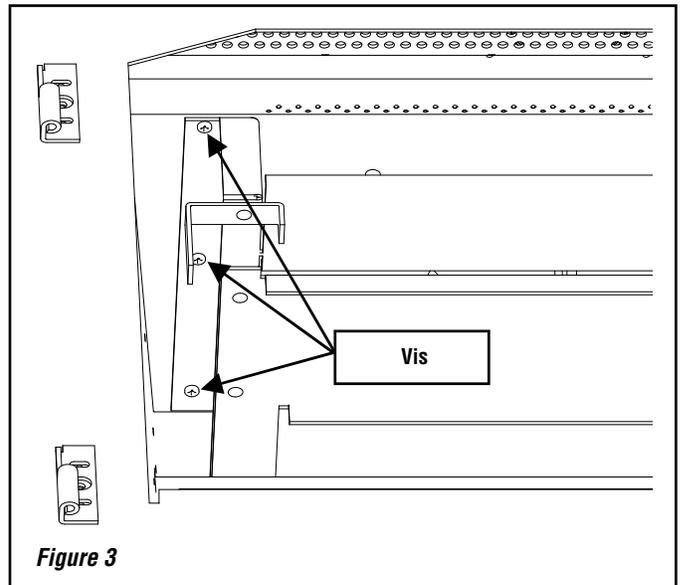

**Étape 4.** Installer la boîte de remplacement en suivant les étapes ci-dessus en sens inverse.

REMARQUE : LES SCHÉMAS ET LES ILLUSTRATIONS NE SONT PAS À L'ÉCHELLE.

IHP se réserve à tout moment le droit d'apporter sans préavis des changements à la conception, aux matériaux, aux caractéristiques ou aux prix, ainsi que de supprimer des options de couleurs, de styles et de produits. Pour obtenir de l'information sur les codes des foyers, contacter le distributeur de votre région.